



CDT-R d.o.o.

Kropa 1a, Si-4245 Kropa, Slovenia

Tel:+386 31 744 555

Fax:+386 4 580 30 16


carbon.design.team@gmail.com

FITTING INFO

Code: MD-9807-C86

Model: Ducati 1098 / 848

Description: Mirror body

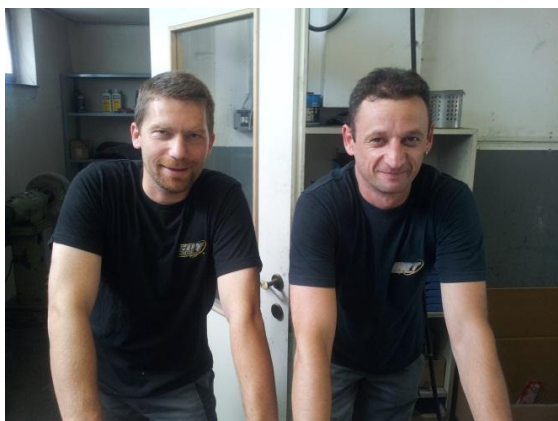

For fitting you will require two capable engineers.



Tooling required:

- Magnet
- Rasper
- Pincers
- Tongs
- Screwdriver



Protect the surface with duck tape to avoid damage.



CDT-R d.o.o.

Kropa 1a, Si-4245 Kropa, Slovenia

Tel:+386 31 744 555

Fax:+386 4 580 30 16

carbon.design.team@gmail.com

FITTING INFO

Code: MD-9807-C86

Model: Ducati 1098 / 848

Description: Mirror body



Use a magnet to pull the metal pin and grab it with tongs.

If the hole is not wide enough use wasper to widen the diameter of the hole.



Use tongs and pull out the pin as hard as you can.



Use pincers to grab the cork.



CDT-R d.o.o.
Kropa 1a, Si-4245 Kropa, Slovenia
Tel:+386 31 744 555
Fax:+386 4 580 30 16
carbon.design.team@gmail.com

FITTING INFO

Code: MD-9807-C86
Model: Ducati 1098 / 848
Description: Mirror body



Use pincers to install thecork.



Cork mounted on the pin.



Final position of the mirror.

If the mirror is loose, foam or tape should be inserted into spherical ball socket.